


REVERSE LOCKOUT SOLENOID CONNECTOR / PLUG

Illustrated here is an image of a Reverse Lockout Solenoid on a T56.

MWA offers a plug / connector to suit T56 – TR6060 – Magnum 6 Speed.

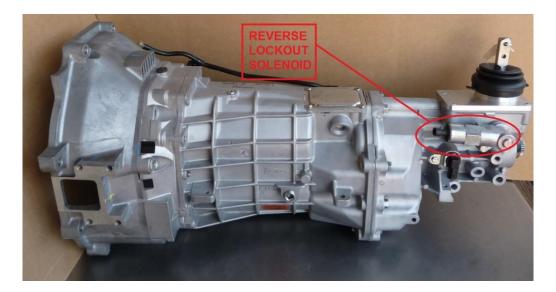




Business: Mal Wood Automotive Address: 42 Lyons Street Warwick, QLD, 4370, Australia Web: https://malwoodauto.com.au

Phone: (07) 4661 3548 Fax: (07) 4661 3562



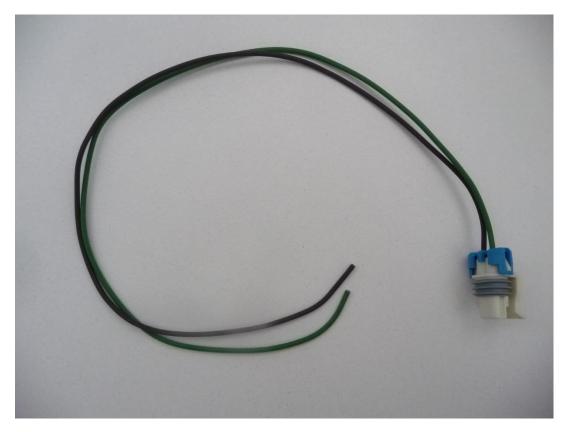

Fit the plug to the solenoid, earth one wire to the transmission.

Run the other wire to the brake light switch and using a scotch lock join the wire to wire on the brake light switch that has no power.

When you need to get reverse obviously you will need the ignition on, and with your foot on the clutch and the other depressing the brake the solenoid will be open allowing easy selection into reverse.